


Adapters, flaps


JPA BR – adapter

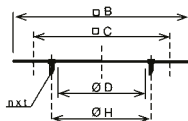

- adapter for connecting JCA flap, JBR free flanges, JAE flexible couplings
- n = number of bolts (it is the same as the number of holes in other accessories)
- thread is up to size 300, M6 up to size 560, M8 up to size 1100 M10

JPA	□ B	□ C	Ø D	n	Ø H
300	289	245	182	4	205
435	419	330	252	4	280
560	544	450	358	8	395
630	614	535	403	8	450
710	694	590	503	12	560
905	884	750	633	12	690
1100	1079	840	713	16	770
1250	1,230	950	1,000	8	1,070

JCA BR – check flap

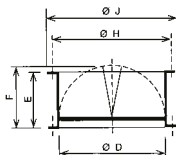


- self-weighting non-return flap for CTH and CTV fire-fighting roof ventilators
- made of galvanized sheet steel
- certified in the Czech Republic

JCA	Ø D	E	F	Ø H	Ø J
300	182	170	113	205	219
435	252	170	148	280	300
560	358	230	201	395	415
630	403	250	224	450	474
710	503	300	274	560	581
905	633	360	339	690	714
1100	713	380	379	770	794
1250	1,004	560	560	1,070	1,110

7¹

JBR BR – free flange

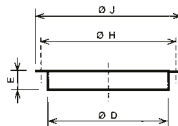

- free flange for CTH and CTV fire-fighting roof fans
- made of galvanized sheet steel
- certified in the Czech Republic

JBR	Ø D	E	Ø H	Ø J
300	182	55	205	219
435	252	55	280	300
560	358	55	395	415
630	403	63	450	474
710	503	69	560	581
905	633	69	690	714
1100	713	69	770	794
1250	1,004	105	1,070	1,110